

Classification:

BT10-038

Reference:

ITB10-070

COPYRIGHT © NISSAN NORTH AMERICA, INC.

Date:

November 11, 2010

2009 – 2011 G37 CONVERTIBLE; WATER LEAK AT WINDSHIELD HEADER

APPLIED VEHICLES: 2009- 2011 G37 Convertible (HV36)

IF YOU CONFIRM

A water leak coming from the top of the windshield (windshield header area),

ACTION

Apply a small amount of silicone sealer between the windshield header and the header weather-strip.

- Use the sealer listed in the Parts Information, or equivalent.
- Apply sealer along the entire length of the windshield header.
- Refer to the Service Procedure for sealer application.

PARTS INFORMATION

Description	PART #	Quantity
Permatex® Clear RTV Silicone Adhesive Sealant (1)	Permatex® Item # 80050 (2) Local Source	Shop supply

(1) Permatex® Clear RTV Silicone Adhesive Sealant is available at many local auto supply stores.

(2) The MSDS for this product is available at www.permatex.com.

CLAIMS INFORMATION

Submit a Primary Part (PP) type line claim using the following claims coding:

DESCRIPTION	PFP	OP CODE	SYM	DIA	FRT
Apply Sealer to Windshield Header Weather-strip	76860-JJ50A	BX2NAA	ZQ	53	0.2 hrs

IMPORTANT: The purpose of "ACTIONS" (above) is to give you a quick idea of the work you will be performing. You **MUST** closely follow the entire Service Procedure as it contains information that is essential to successfully completing this repair.

Infiniti Bulletins are intended for use by qualified technicians, not 'do-it-yourselfers'. Qualified technicians are properly trained individuals who have the equipment, tools, safety instruction, and know-how to do a job properly and safely. NOTE: If you believe that a described condition may apply to a particular vehicle, DO NOT assume that it does. See your Infiniti dealer to determine if this applies to your vehicle.

SERVICE PROCEDURE

1. Open the convertible top to the fully open position.
2. Apply silicone sealer along the entire length of the windshield header (see Figures 1 and 2).
 - Use the sealer listed in the Parts Information, or equivalent.
 - Apply the sealer between the edge of the header weather-strip and the header.



Figure 1

- Gently pull the edge of the weather-strip away from the header and squeeze in a small amount of sealer.
- Apply the sealer along the entire length of the header.
- Make sure to clean any excess sealer off of the header and weather-strip.



Figure 2

3. Allow the sealer to cure for at least 3 hours with the top open.

NOTE: Recommended cure time is 24 hours with the top open.