

**Classification:**
**Reference:**
**Date:**

BT07-039

ITB07-043

November 12, 2007

## 2008 G37 COUPE; QUARTER GLASS MOLDING IS NOT FLAT

**APPLIED VEHICLE:** 2008 G37 Coupe (CV36)

**APPLIED VIN:** Built before JNKCV64E(\*)8M 107984

**APPLIED DATE:** Built before September 10, 2007

### IF YOU CONFIRM

The front end of the quarter glass molding is lifted and will not stay flat to the body (left and/or right side).

### ACTION

Cut about 1/16 inch (2 mm) off of the front edge of the molding as shown in the Service Procedure.



Figure 1

### CLAIMS INFORMATION

Submit a Primary Part (PP) type line claim using the following claims coding:

DESCRIPTION	PFP	OP CODE	SYM	DIA	FRT
Repair Quarter Glass Molding (One or Both Sides)	(1)	BX77AA	ZA	03	0.2


(1) Reference the electronic parts system (FAST or equivalent) and use the Glass Assy, Side Window-RH or LH P/N as the PFP.

**IMPORTANT:** The purpose of "ACTION" (above) is to give you a quick idea of the work you will be performing. You **MUST** closely follow the entire Service Procedure (starting on page 2) as it contains information that is essential to successfully completing this repair.

Infiniti Bulletins are intended for use by qualified technicians, not 'do-it-yourselfers'. Qualified technicians are properly trained individuals who have the equipment, tools, safety instruction, and know-how to do a job properly and safely. NOTE: If you believe that a described condition may apply to a particular vehicle, **DO NOT** assume that it does. See your Infiniti dealer to determine if this applies to your vehicle.

## SERVICE PROCEDURE

1. Cut off about  $\frac{1}{16}$  inch (2 mm) of rubber from the front edge of the molding as shown in Figure 2.
  - Use a sharp cutting tool so you will have a clean cut edge.

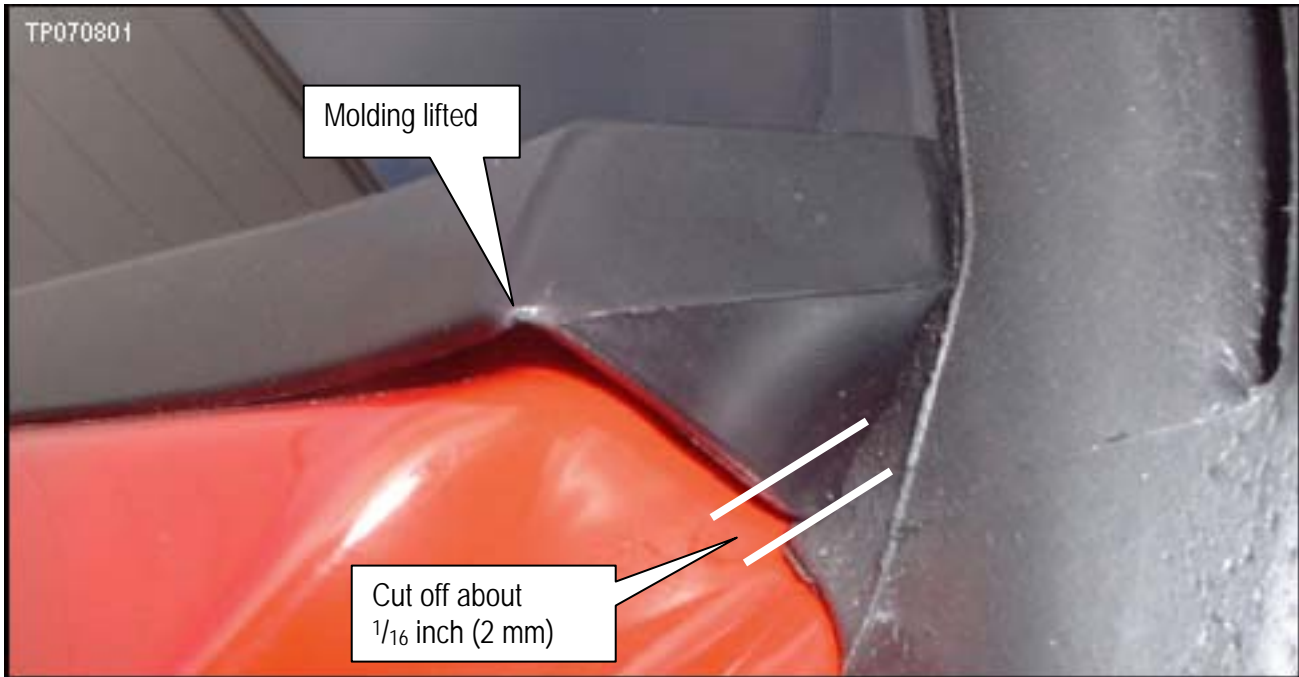

2. Tape the molding in place for about 20 minutes to "set" the molding in the down (flat) position.
  - Use auto body painters tape.



3. Remove the tape and make sure the molding stays flat to the body.



Figure 4

